


Note: Please check the chassis' manual for specific installation instructions for your computer chassis.

1. POSITION THE REVOLT SFX PSU

Find the preferred position for the Revolt SFX PSU in the computer chassis. There are 6 available screw positions available (not all are necessary).

 
If the preferred position is for ATX PSU sizes, please check Step 2b for details about the ATX Bracket installation.

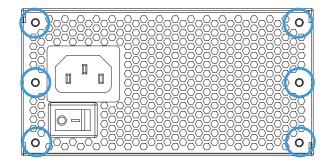


2. INSTALL THE REVOLT SFX PSU


The Revolt SFX PSU can be mounted securely using 4 or 3 screws as shown:






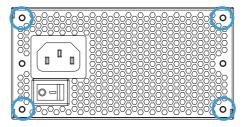

3-Screw mounting options:

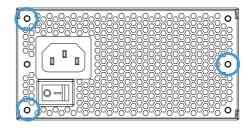


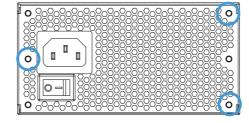


2b. Optional: INSTALL USING THE ATX BRACKET

The ATX Bracket allows the Revolt SFX PSU to be installed in a ATX PSU location. The ATX Bracket is mounted to the chassis using 4x screws as shown:



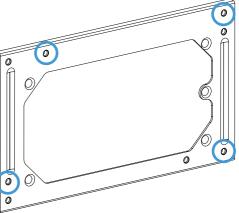


The Revolt SFX PSU can be mounted to the ATX Bracket with 4x Screws:

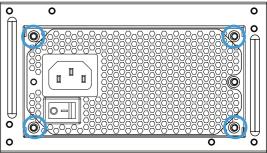





3. INSTALL POWER CABLES

  Connect all necessary power cables to the designated connectors on the Revolt SFX PSU.

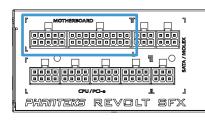







8-PIN CPU and GPU cables:

CPU/PCI-e PHANTEKS REVOLT SFX




Connect all power cables to the system components:


| 24-pin Motherboard | 4+4-pin CPU Cable | 6+2-pin GPU Cable | SATA Cable | Molex Cable |
|--------------------|-------------------|-------------------|------------|-------------|
| | | | | |

4. TURN ON REVOLT SFX PSU

When all internal power cables are installed and connected, the power cable can be plugged into a wall outlet and the rear of the Revolt SFX PSU.

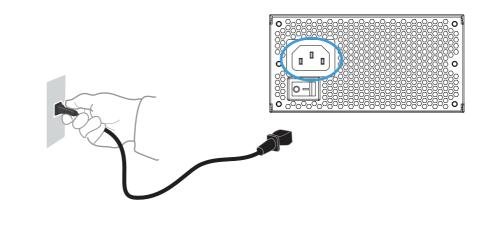

As a final step the power button must be switched to the "ON" position:

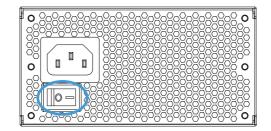

www.phanteks.com

Contact

US & Canada support@phanteksusa.com

> International support@phanteks.com

Follow Us







@Phanteks

Phanteks 🕞

